


USB to UART Module Feature

- USB to RS-232 Converter
- D-SUB9 Connector
- 5PIN min-USB Type Connector
- Support driver Window ,Linux

D-SUB9 Connector Pin Map

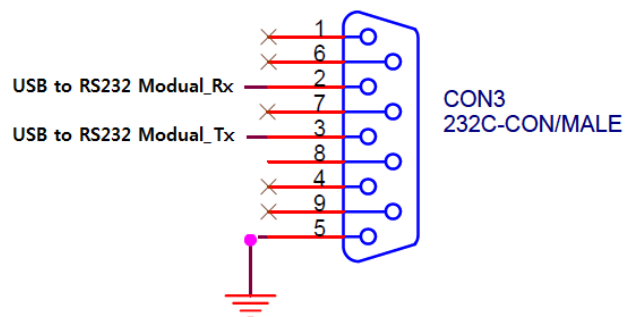

CON3

NO	Pin Name
1	N.C
2	USB to RS 232 Modual Rx
3	USB to RS 232 Modual Tx
4	N.C
5	GND
6	N.C
7	N.C
8	N.C
9	N.C

Shipping Meterials

- USB to RS232 Module 1 EA

Documents

- [Driver](#)