

# 1D Barcode Scanner

## Quick Start Guide

V 1.2

### System Setting



Factory Defaults



Version



USB Mode\*



RS232 Mode

### Reading Mode



Trigger Mode\*



Continuous Mode

### Suffix Setting



Add CR\*



Add LF



Add CR+LF



None

### Rate



9600\*



115200

VC-JYSM-1DR02.E120